866-650-7827
21739 Highway 64
Canton, Texas 75103

32” Bollard Installation Guide

Tools Needed for this Installation

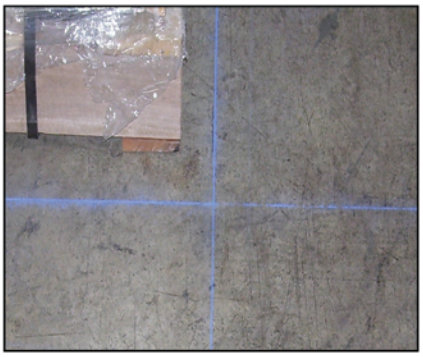

Step 1:

1. Measure all areas of installation and use a chalk line to ensure a straight line for guidance when drilling the holes.
2. Unscrew the threaded-base from the bottom of the bollard.

Step 2:

3. Mark (2) holes using a marker and the threaded base as the drilling template.
4. Once you have marked the holes 1/2” to 2” from the fixture corner/case edge, then drill your holes using a 5/8” masonry bit and vacuum out debris.

Step 3:

5. Fill holes approximately ½ full with heavy duty construction adhesive.

(Important to wear all protective gear before starting installation)

*US & International Patents Pending

866-650-7827
21739 Highway 64
Canton, Texas 75103

32” Bollard Installation Guide

Step 4:

6. Insert bolts and tighten using an impact wrench with a 15/16” socket until bolts are completely tightened.

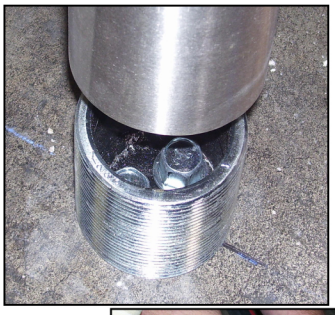

Step 5:

7. Hand screw the bollard onto the all-thread base until tight - as shown in the photo.
   <u>be careful not to cross-thread</u>

Step 6:

8. Using a 24” Pipe Wrench at the bottom of the bollard as close to the floor as possible, start tightening.

9. We suggest you cover the grips of the pipe wrench with **<u>duct tape</u>** to protect the finish on the bollard from scratches.

(Important to wear all protective gear before starting installation)

*US & International Patents Pending